



# CAREL



## Compressed air and water spray humidifier

The adiabatic humidification system **mc** is designed for humidification of **medium to large industrial rooms** and considerable air volumes in **ducts** and **air handling units**.

The correct mixture of compressed air and water produces a **highly atomised water spray**, which evaporates absorbing the necessary energy directly from the environment.

The **microprocessor controlled cabinet** permits precise, and completely automatic, operation of the **mc** system regulating the flow rate depending on the actual and required humidity level.

Atomising nozzles made in AISI 316 stainless steel feature an exclusive **self-cleaning mechanism** and the controller manages an **automatic cleaning cycle** which ensures hygienic operation and minimum maintenance.



## Applications

With more than 5,000 installations world-wide, the **mc** system is one of the best selling and best tested adiabatic humidification systems on the market for medium-high capacity installations.

Typical installations can be divided into two groups: industries where compressed air already is available and industries where optimal hygienic conditions and precise humidity control is requested.

Industries where compressed air is available:

- textile;
- wood-working;
- paper;
- tobacco;
- leather;
- print on paper.

Industries where compressed air is not available:

- hospitals;
- offices;
- museums;
- test rooms;
- clean rooms;
- microchip production.

The **mc** humidification system is also suitable for positive-temperature refrigerating rooms for ripening, seasoning, food preservation and wine aging.

## Automatic cleaning cycle

The automatic cleaning cycle is activated every  $\frac{1}{2}$  hour during operation and immediately upon shut-down when the requested humidity level has been reached. The cleaning cycle consists of two steps. Firstly the water supply is stopped while the air continues to dry the nozzle, secondly the compressed air supply is stopped momentarily to eliminate lime scale in the orifice by the self-cleaning nozzle mechanism. In this way hygienic operation is secured and maintenance minimised.

## Air compressor

The **mc** system requires compressed air to operate supplied by an external air compressor. The air volume at standard atmospheric pressure required to atomise one litre of water is 1,27 Nm<sup>3</sup> compressed to an air pressure between 4 and 10 bar.

The power consumption of the air compressor depends on the compressor type, the efficiency and the pressure the air is compressed to.

Typically the power consumption is in the range from 70 W to 110 W per litre atomised water per hour.

## Fine atomising


The particular shape of the nozzles allows atomising of hundreds of litres, atomised to droplets with diameters at just 5 to 10 microns, creating fast absorption of the water mist into the air. The absorption process extracts energy from the air equal to 700 W per litre of water absorbed by the air, every hour, which cools the air significantly. Depending on the air conditions the cooling effect can be up to 10 °C.



## Hygienic operation

Carel's **mc** systems represent the safest atomising humidifiers, as:

- no water is re-circulated;
- the water line is drained automatically when the nozzles are not atomising to avoid stagnant water;
- a short automatically controlled cleaning cycle cleans the nozzles for water and lime scale every  $\frac{1}{2}$  hour;
- the nozzle orifice is blocked by a mechanical pin when no compressed air is supplied to avoid dripping.

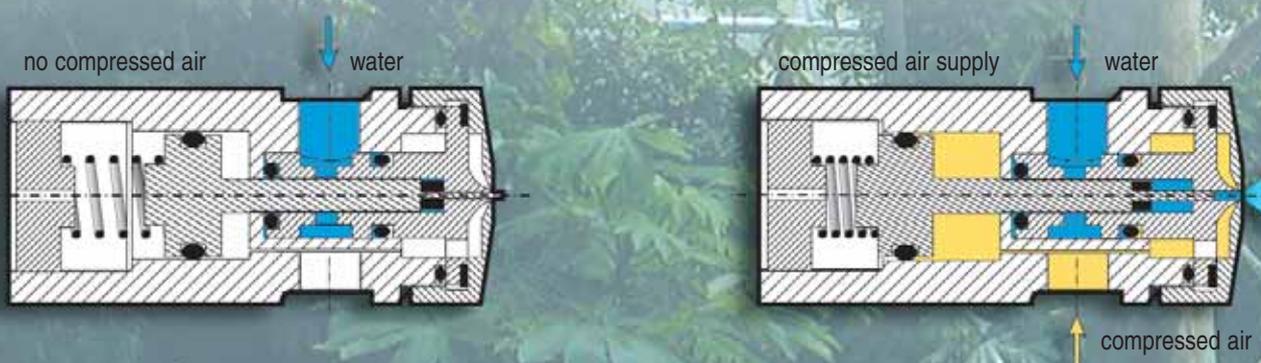

## Water filter and plastic case

The water filter in wrapped propylene eliminates particles down to 5 µm and is contained in a plastic case mounted in the water supply line before the cabinet.

It should be noted that the water filter is a standard replaceable part and comes without the plastic case, required for operation.

## Solid particle filter for compressed air

The solid particle filter is used to remove particles and impurities down to 5 µm from the compressed air to avoid impurities reducing or blocking the flow through the nozzles.

## Oil filter for compressed air

The oil filter is used to eliminate any oil in the compressed air, so as to ensure the correct operation of the atomising nozzles.

The oil filter also contains a 1 µm air filter and it is therefore important that the oil filter is installed on the air line after the solid particle filter.



## mc system components

A complete **mc** system is composed of an air compressor, an **mc** cabinet, nozzles and mounting kits, air and water filters, a humidity probe or humidistat, and pipe-work to distribute compressed air and water from the cabinet to the nozzles.

For some applications a water treatment system is also required to reduce the water mineral content.

### Nozzle mounting kit

A complete mounting kit is available for easy installation of one nozzle between the air line and the water line.

The kit contains a manual valve for the air line as well as one for the water line to facilitate maintenance of the nozzles.

### Self-cleaning nozzles


The long lasting nozzles are made in stainless steel AISI 316 and available with five capacities from 2,7 to 10 kg/h. The self-cleaning nozzles feature a pin mechanism that blocks the nozzle orifice when no compressed air is supplied to the nozzle. In this way any lime scale in the orifice is eliminated each time the **mc** system is switched off.

### Cabinet types

An **mc** cabinet is available for every kind of application.

- Flow rates up to 60 and 230 kg/h.
- For mains water and for demineralised water. The components in contact with water in the demineralised water cabinet are in stainless steel and resistant plastic.
- The control options available are for proportional humidity control or ON/OFF regulation. Proportional control is recommended for duct applications whereas ON/OFF regulation usually is recommended for direct room humidification.

## Overview drawing

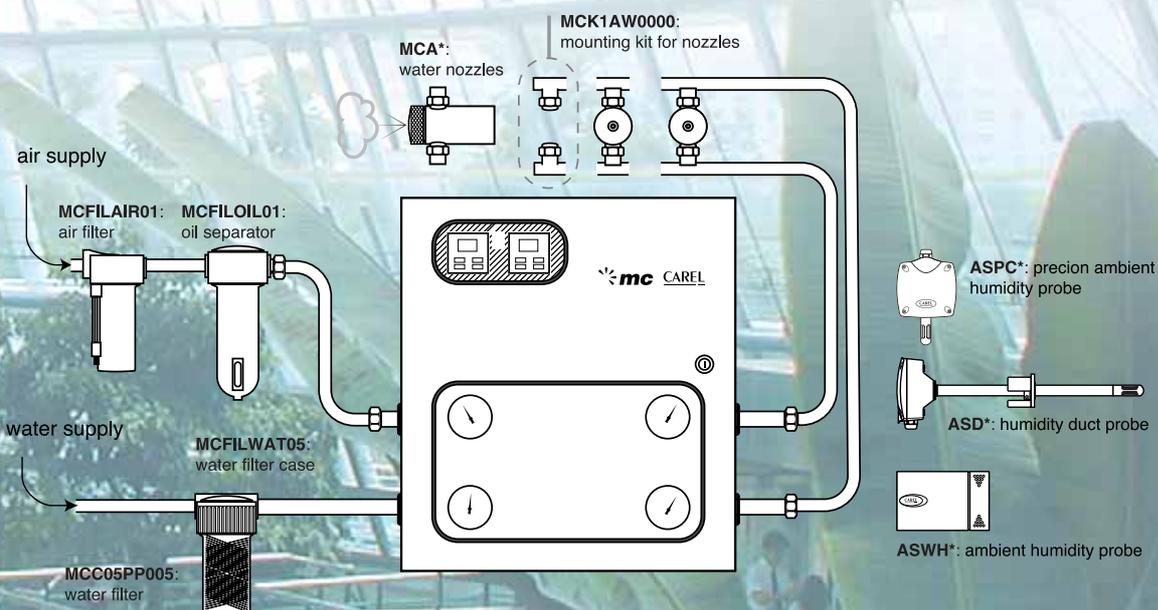



## Technical specifications

| Cabinet                         | MC60  | MC230                              |
|---------------------------------|---|------------------------------------|
| Nominal humidification capacity | 60 kg/h   | 230 kg/h                           |
| Minimum humidification capacity | 1 nozzle  |                                    |
| Power supply                    | 230 Vac, 50/60 Hz, single phase   |                                    |
| Air consumption                 | 1.27 Nm <sup>3</sup> /h / (kg/h)  |                                    |
| Air inlet pressure              | 0.4 to 1.0 MPa / 4 to 10 bar  |                                    |
| Water inlet pressure            | 0.2 to 0.4 MPa / 2 to 4 bar   |                                    |
| Air inlet connection            | 1/4" G  | 1/2" G                             |
| Water inlet connection          | 1/4" G  | 1/2" G                             |
| Air outlet connection           | 1/4" G  | 1/2" G                             |
| Water outlet connection         | 1/4" G  | 1/2" G                             |
| Total hardness limits           | 0 to 40° fH / 0 to 400 ppm (CaCO <sub>3</sub> )   |                                    |
| Conductivity limits             | 30 to 1250 µS/cm for mains water cabinet, 0 to 1250 µS/cm for demineralised water cabinet |                                    |
| Water drain connection          | TNF Ø 8/10 mm   |                                    |
| Water temperature limits        | 1T50 °C / 34T122 °F   |                                    |
| Operation temperature           | 1T50 °C / 34T122 °F   |                                    |
| Operating humidity              | 0 to 90% r.H., non condensing   |                                    |
| Storage temperature             | -10T 70 °C / 14T158 °F  |                                    |
| Storage humidity                | 0 to 90% r.H., non condensing   |                                    |
| Index of protection             | IP55  |                                    |
| Weight                          | 23 to 26 kg depending on the model  | 27 to 32 kg depending on the model |
| Control signal from probe       | -1 V to 1 V (default)   |                                    |
| Power output to active probe    | 8 to 24 Vac, max. 40 mA   |                                    |
| Active Carel humidity probes    | For duct: ASDC* or ASDH*, for room: ASPC* or ASWH*  |                                    |

## How to select your cabinet

control:  
D= ON/OFF  
P= proportional

R: room installation  
D: duct installation



nominal capacity:  
0= 230 kg/h  
1= 60 kg/h

water type  
NW0: mains water  
AW1: demineralised water

## Nozzles



|            |   |
|------------|---|
| MCAA200000 | Atomising nozzle in AISI 316, capacity 2.7 kg/h |
| MCAB200000 | Atomising nozzle in AISI 316, capacity 4.0 kg/h |
| MCAC200000 | Atomising nozzle in AISI 316, capacity 5.4 kg/h |
| MCAD200000 | Atomising nozzle in AISI 316, capacity 6.8 kg/h |
| MCAE200000 | Atomising nozzle in AISI 316, capacity 10 kg/h  |
| MCK1AW0000 | Mounting kit for one nozzle                     |

## Filters

|            |  |
|------------|--|
| MCFILAIR01 | Solid particle filter for compressed air, 5 µm |
| MCFILOIL01 | Oil filter for compressed air                  |
| MCFILWAT05 | Water filter case                              |
| MCC05PP005 | Water filter, 5 µm                             |

## Dimensions

60 kg/h - 230 kg/h

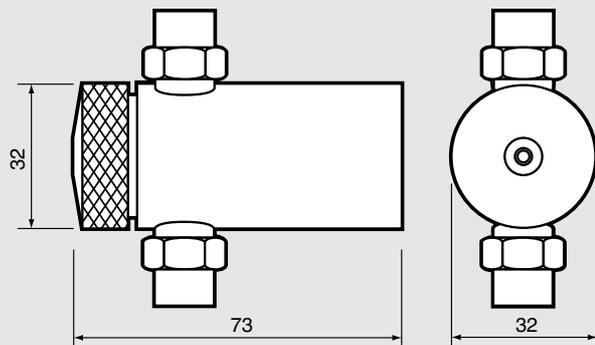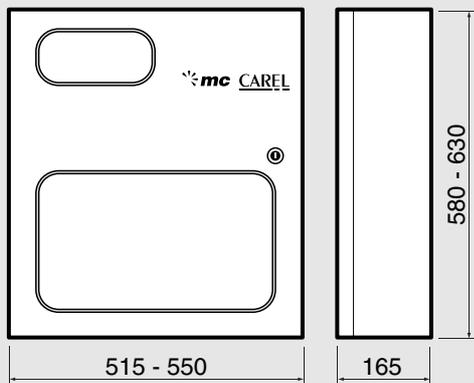

CAREL reserves the right to modify or change its products without prior notice

Cod. +302240251 - rel. 2.0 - 03.07.03

© CAREL S.p.A. 2003 all rights reserved

# CAREL

CAREL S.p.A.

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)

Tel. (+39) 0499 716611 - Fax (+39) 0499 716600

e-mail: carel@carel.com - www.carel.com